

RTSP Streaming directly from Netflow

To receive videos via RTSP from the server, use the following link format:

Live video	High-quality stream	rtsp://login:password@IP address:554/hosts/HOSTNAME/DeviceIpint.N/SourceEndpoint.video:0:0
	Low-quality stream	rtsp://login:password@IP address:554/hosts/HOSTNAME/DeviceIpint.N/SourceEndpoint.video:0:1

Attention!

You cannot receive video from cameras with MJPEG codec from the RTSP server. To receive video from cameras from the RTSP server, you must change the codec of cameras.

Description:

login:password	User username and password in Netflow Attention! For the correct operation of the RTSP server, the username must meet the following conditions: <ul style="list-style-type: none">• start with a letter;• contain only Latin letters, digits, and the following characters: "/", "-", "_", ":", ";", "+".
hosts	Permanent part of a link
HOSTNAME	Server name (must be written only in uppercase letters)
N	camera ID in <i>Netflow</i>
SourceEndpoint.video:0:0	Permanent part of a link

Sample:

rtsp://**root:12345678@192.168.10.81:554/hosts/NETFLOWEC-DEMO/DeviceIpint.1/SourceEndpoint.video:0:0**